


PDA200E 200m2 wall-mounting hearing loop amplifier

Part No. **PDA200E**

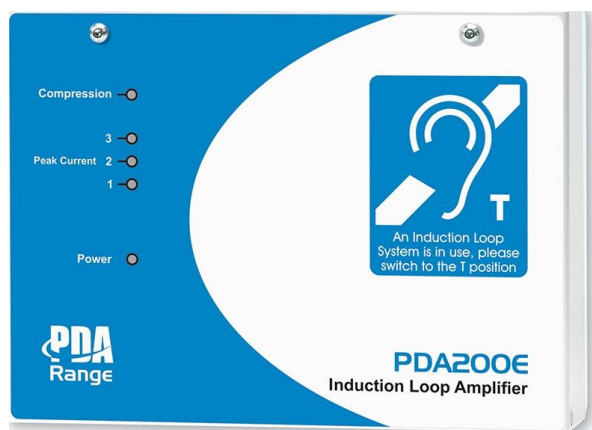

Overview

A wall-mountable hearingloop amplifier capable of driving a perimeter loop of up to 200m2.

Internal drive, level and metal compensation controls.

Two balanced / unbalanced line level inputs.

One microphone input with 12V phantom power for electret microphones.

Full compatibility with the Outreach plate audio input extension system.

Fully compliant with BS EN 60118-4 when correctly installed.

Also available in a variety of cost-effective 'AK' Range kits for ease of purchase, specification and installation.

Technical Specifications

Type	Wall mounting. Requires fixed Mains wiring.
Coverage	200m2 approx.
Mains supply	230V 50/60Hz.
Auxiliary inputs	1 Microphone and 2 x Line/Outreach screw connectors (on PDA200E).
Indicators	Input level; loop current meter (peak 3, 2, 1); compression; power on.
Controls	Input level; loop drive, metal compensation.
Product dimensions (mm)	W 271 x H 200 x D 77mm (amplifier only).
Construction & finish	White steel.
IP Rating	IP20.
Weight	2.9 kg (amplifier only).
Operating conditions/temperature	-5°C to +40°C. Max relative humidity: 95%.